

FIG. 1  
— PRIOR ART —

FIG. 2

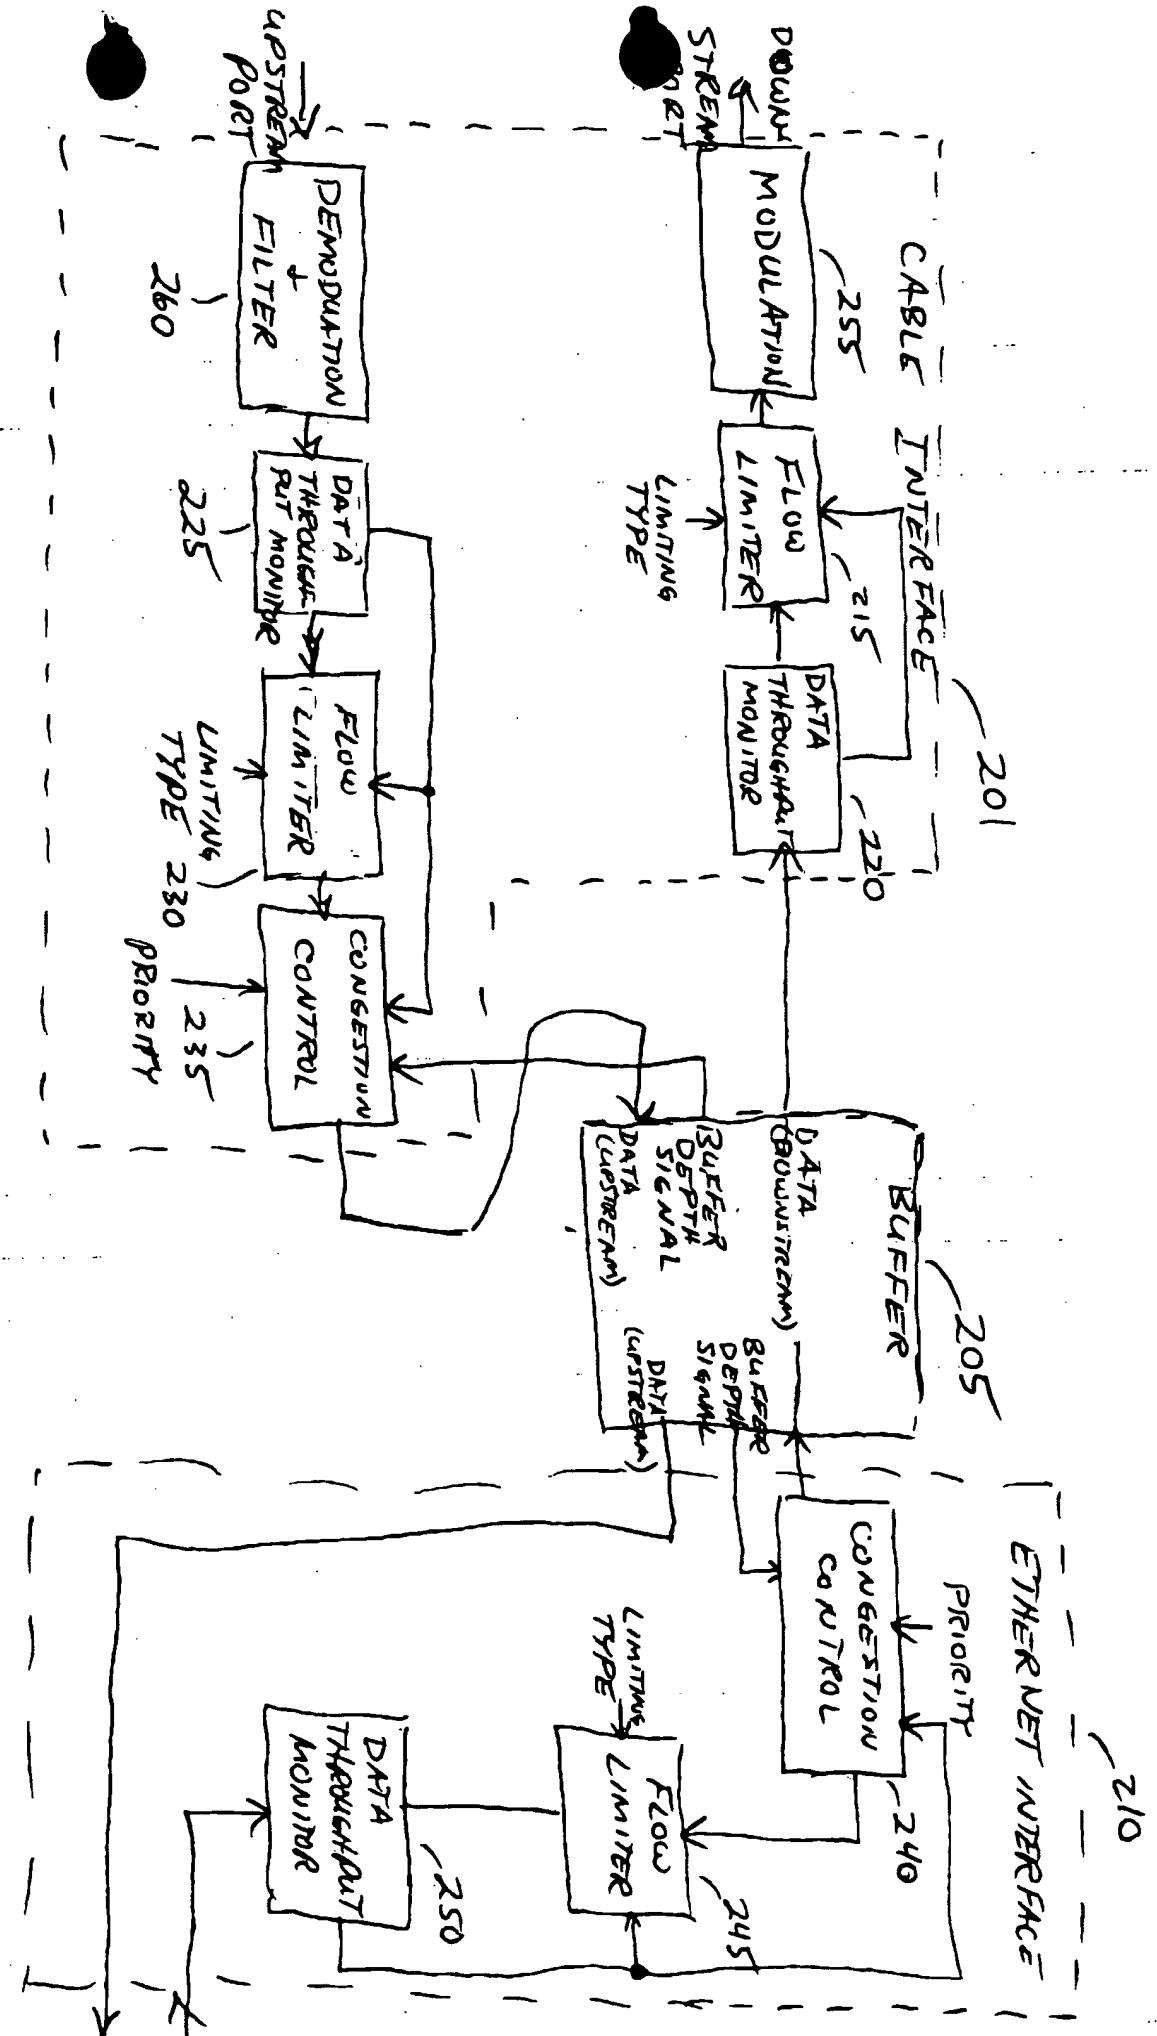


FIG. 3


CURRENT FLOW RATE

	MINth MAXth Pa	Needy	Normal	Greedy	Super-Greedy
Priority 0		98% 99% 0.1	75% 95% 0.1	65% 85% 0.1	5% 25% 0.1
Priority 1		98% 99% 0.1	65% 85% 0.1	55% 75% 0.1	5% 25% 0.1
Priority 2		98% 99% 0.1	55% 75% 0.1	45% 65% 0.1	5% 25% 0.1
Priority 3		98% 99% 0.1	45% 65% 0.1	35% 55% 0.1	5% 25% 0.1
Priority 4		98% 99% 0.1	35% 55% 0.1	25% 45% 0.1	5% 25% 0.1
Priority 5		98% 99% 0.1	25% 45% 0.1	15% 35% 0.1	5% 25% 0.1

Current Packet Priority

ensures  $T_{min}$  is guaranteed      ensures  $T_{max}$  is a pseudo-hard limit

FIG. 4

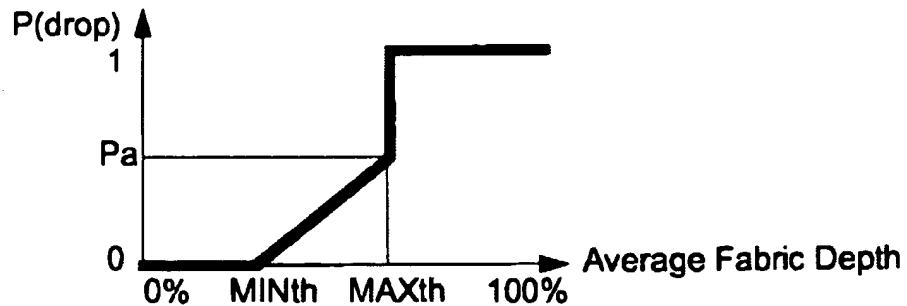

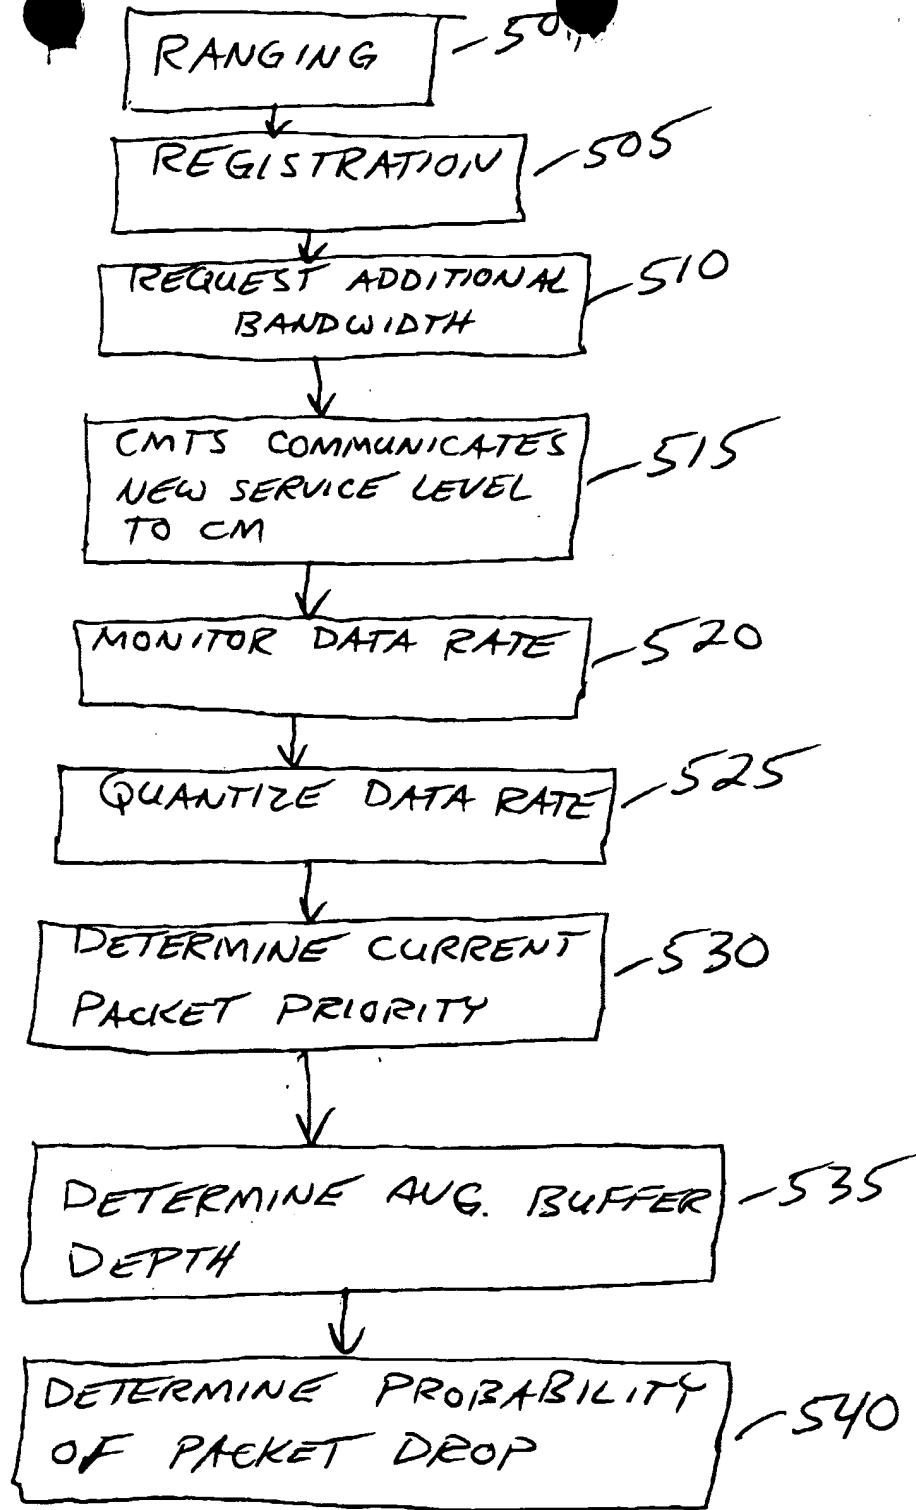


FIG. 5

